

Instructions for Comet GO TO Function

After connecting the STAR BOOK Type-S controller to a PC, you can input orbital elements of comets. The orbital elements of the comets can be obtained from astronomy magazines or internet web sites related to astronomy. After installation of the data, you can slew the telescope to the comets automatically. (It allows you to slew the telescope to the comets automatically, but it does not track the comets accurately.)

Required Items

- STAR BOOK Type-S Controller
- Power Supply for STAR BOOK Type-S
- PC for data transfer
- LAN Crossover Cable
- Orbital Elements of Comets

Procedure for Comet Data Input

Connect the STAR BOOK Type-S controller to the PC with the LAN crossover cable.

(About connection of the LAN cable to the PC, refer to the instructions of the PC.)

Turn on the STAR BOOK Type-S controller.

Turn on the PC.

Wait for one minute while the PC and STAR BOOK Type-S acquire the network information automatically.

Advance the screen of the STAR BOOK Type-S controller to SCOPE MODE. Press Menu to display the System Menu. Move the cursor to About STAR BOOK S and press Select to enter.